

Volume




Play Mode




Loop



Random

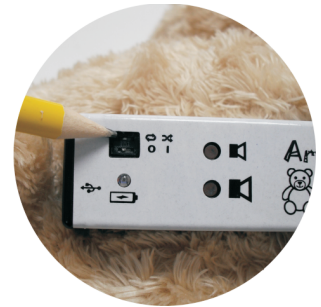

Power

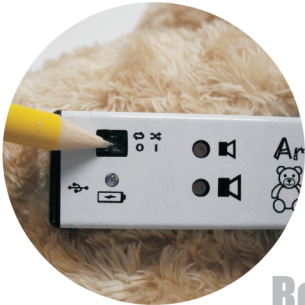

O

Storage/
Reset Playlist



I

Normal
Use

Charge

Connect USB cable

Charging

Charged

